Assembling Tessera Baby Book - Instructions




Step 1: Cover the baby book pages with the fabric binding. Line the page and binding holes up, and make sure larger holes on Binding Fabric are in back.




Step 2: Place Baby Book pages with Binding on a flat surface (Left picture). Put Front Book Cover on top, and line up the holes. Take the two longer screw posts, and fit them through the book holes (Right picture).



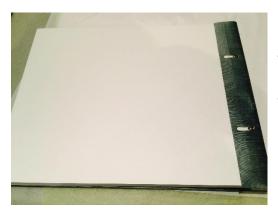

Step 3: Now you need to turn the book over to put on the Back Cover. Hold down on the screw posts while slowly flipping the pages to the other side. All pages should now be backside up, sitting on the Front Book Cover.

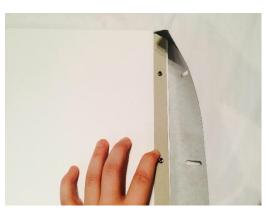

Step 4: This is where the cardboard spacer gets put in. Flip open the fabric binding, slide cardboard space onto screw posts (left picture), and flip the fabric back over so that the cardboard can no longer be seen (right picture).





Step 5. Take the Back Book Cover and line the holes up with the screw posts. Slide Back Cover on, and screw on the Screw posts' backs.